

HARDWIRED QUICK START GUIDE

STEP 1 Identify the wiring cable:


Red cable - Power supply (12 V)

Black cable - Ground

White cable - Ignition sense

Other wires hang loose


Blue - Cellular
Green - GPS

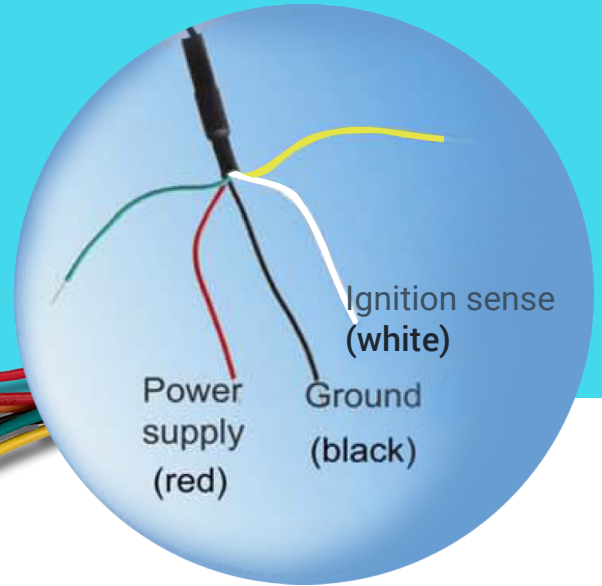

STEP 2 Connect the GPS tracker

Power on the unit. The **blue** status LED will blink at the rate of once every second within 1 to 2 minutes. This indicates that the device has an available connection with the cellular network.

Final installation should be done only after both the **blue** and **green** LEDs blink at the rate of once every second.

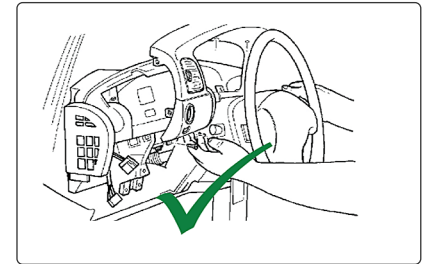

STEP 3 GPS tracker position

Make sure that the label is facing the right direction (e.g. If label on the unit says, "Label side down", then the units should be installed so that the label side faces down. The device needs access to GPS signals, so make sure that the install position provides this access.



| LED | Description | Status |
|---------------------|----------------------------|-----------------------|
| BLUE (Cellular) | Searching for Cell Network | No Blue Light |
| | Cell Connected | Blinking every second |
| GREEN (Cellular) | Searching for satellite | Solid green |
| | GPS Lock | Blinking green |

STEP 4 Contact Details

Your login details will be emailed to you. Using the account credentials, log on to your account. Once the blue status LED is blinking once every second, the device will shortly start transmitting information to the host server (it transmits once every 2 minutes when vehicle is running and every 2 hours when not running) and you can see all the logged information.

After installation if the unit is not working

Make sure the blue LED on the unit is blinking at the rate of once every second (as described in STEP 2).

If so, then start the vehicle engine and keep the engine running for a few minutes to get a quick update. When the engine is off, the web platform updates at once every 2 hours and when the engine is on, the update rate is once every 2 minutes.

If the engine is on and the web platform is updating at once every 2 hours, then the ignition sense wire (white cable) is not connected. This needs to be connected for real time update (at 1 or 2 minute(s) interval).

Ready to secure your trailers?

Get started today with industry-leading tracking solutions designed specifically for detachable trailers and transport assets.

Request a Quote: 855-658-7225